

105

Feeler (Thickness) Gauges

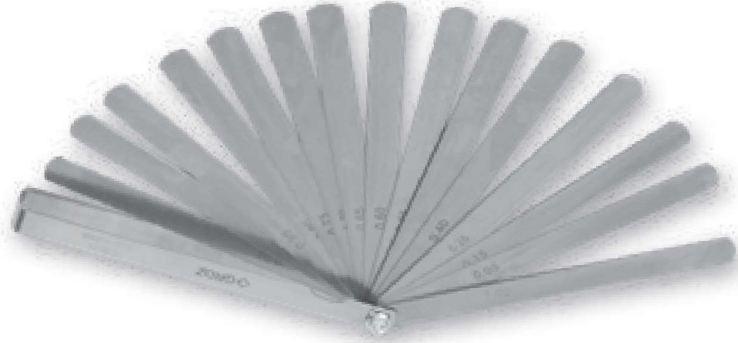
FLG

Feeler Gauges are used for adjusting & gauging spark plugs, distributor points and valve clearances or any other instance of measuring space between two points

Stainless steel construction with each leaf marked with its thickness

Lock nut secures one or more leaves in position and each leaf is detachable if necessary

Complete with a protective holder that helps to preserve trueness of the leaf edges


FLG/20/150


ORDERING INFORMATION

CAT NR.	NUMBER OF LEAVES	SIZES	BLADE LENGTH (MM)	BLADE WIDTH (MM)	BOX QTY.
		(MM)			
FLG/13/100	13	0.05, 0.10, 0.15, 0.20, 0.25, 0.30, 0.40, 0.50, 0.60, 0.70, 0.80, 0.90, 1.00	100	13	5
FLG/20/150	20	0.05, 0.10, 0.15, 0.20, 0.25, 0.30, 0.35, 0.40, 0.45, 0.50, 0.55, 0.60, 0.65, 0.70, 0.75, 0.80, 0.85, 0.90, 0.95, 1.00	150	13	5

106

Radius Gauges

RDG

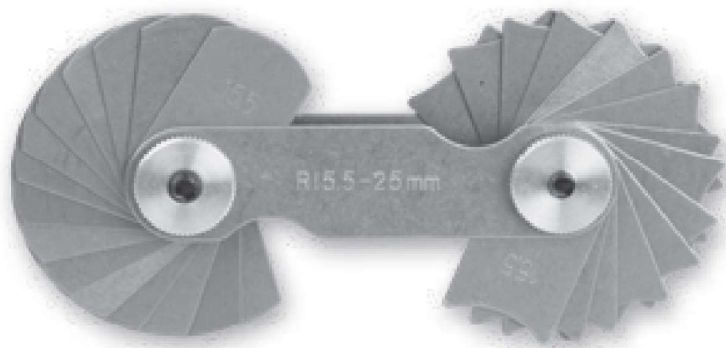
Radius Gauges are used by tools & die-makers, machinist's, screw machine operators & pattern makers to check layouts, radii of tools, dies & patterns

Useful for measuring external & internal radii

Stainless Steel construction with leaves etched with dimensions in millimetres

When not in use, the gauge can be rotated into the tools housing protecting the individual leaves

Locking nut holds gauge in open or closed position


RDG/15/15.5-25

ORDERING INFORMATION

CAT NR.	NUMBER OF LEAVES	SIZES	BOX QTY.
		(MM)	
RDG/17/1-7	17 Pairs	1.0, 1.25, 1.50, 1.75, 2.0, 2.25, 2.50, 2.75, 3.0, 3.50, 4.0, 4.5, 5.0, 5.50, 6.0, 6.50, 7.0	5
RDG/16/7.5-15	16 Pairs	7.5, 8.0, 8.5, 9.0, 9.5, 10.0, 10.5, 11.0, 11.5, 12.0, 12.5, 13.0, 13.50, 14.0, 14.50, 15.0	5
RDG/15/15.5-25	15 Pairs	15.50, 16.0, 16.50, 17.0, 17.50, 18.0, 18.50, 19.0, 19.50, 20.0, 21.0, 22.0, 23.0, 24.0, 25.0	5